


TECHNICAL CIRCULAR

- Alignment Elastic Joins -

The elastic joins for the coupling between the motor and the hydraulic pump should be maintained every 6 months (this time depends on the use of the diesel motor pump). The principal verifications are especially about the own join and to your alignment between the components that form us.

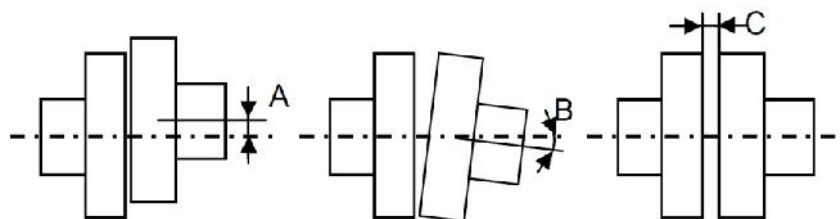

Maximum tolerances:

ENGINE	A	B	C
1 e 2 cylinders	0,1 mm	33'	2..4 mm
3 e 4 cylinders	0,3 mm	46'	3..4 mm
6 cylinders (max 200 kw)	0,3 mm	46'	3..5 mm

NOTE: all our diesel motor pumps are selling aligned and blocked in the correct points of support.

You must not have to change this or you will lose your warranty.

All interventions to fix any problem must be done by a qualified technician. If you need to fix something relative to elastic joints, you need to verify if the diesel motor pump is turned off and you have to make sure that it doesn't turn on accidentally. For remove the protection you have to call experienced people or you can damage your diesel motor pump.



The protections just can be removed after the security measures taken for the pump!